


# SC405 SCANNER 2D USER MANUAL



# SC405




## Scanner Overview

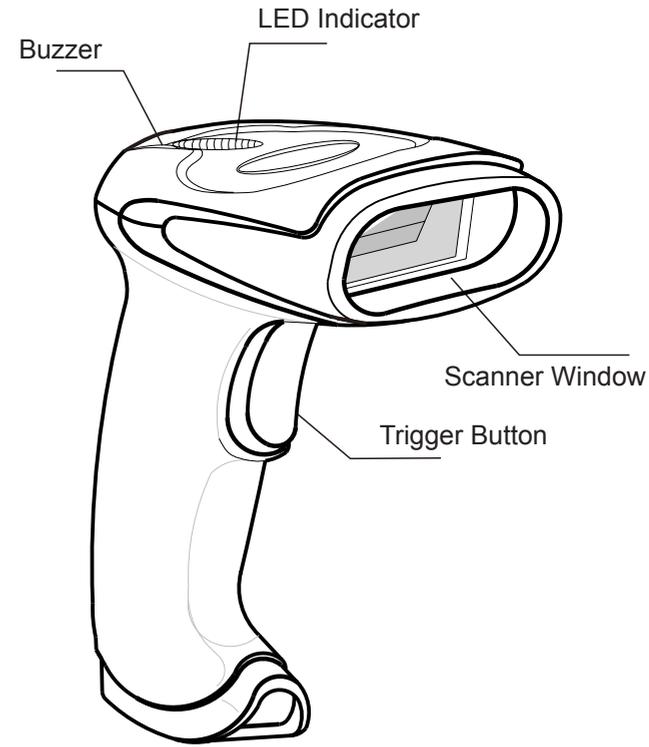


NOTE: Product appearance may vary

## Plug & Unplug Cable

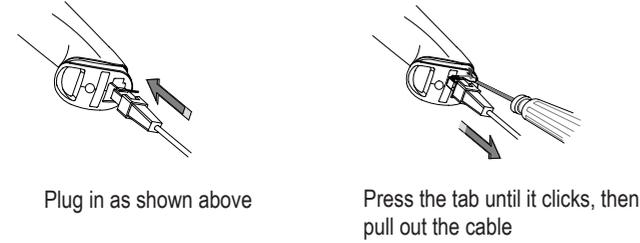


## Connection Guide


(1) USB Cable

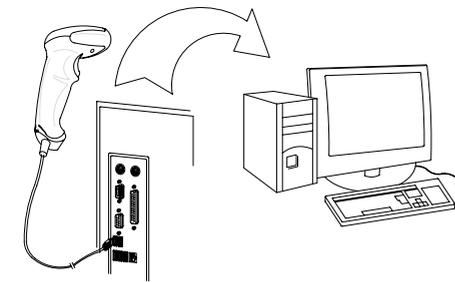

(2) RS232 Cable

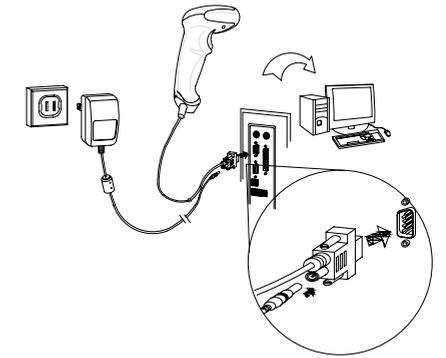

(3) RS485 Cable

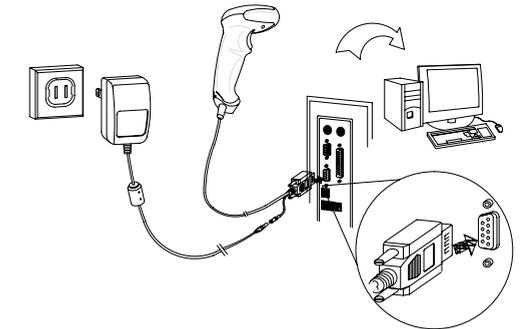

## 2D Barcode Scanner

### Quick Start Guide



Contents: Barcode Scanner, Quick Start Guide, USB/RS 232 Cable  
Power Adapter (optional)


### Lights Indicator

LED indication	Explanation
Blue light blinking	Decoding Successfully
Blue light ON	Standby status


### Beeps

Beep indication	Explanation
One beep	Decoding Successfully
Two beeps	Successful parameter setting

## Scanning Angle

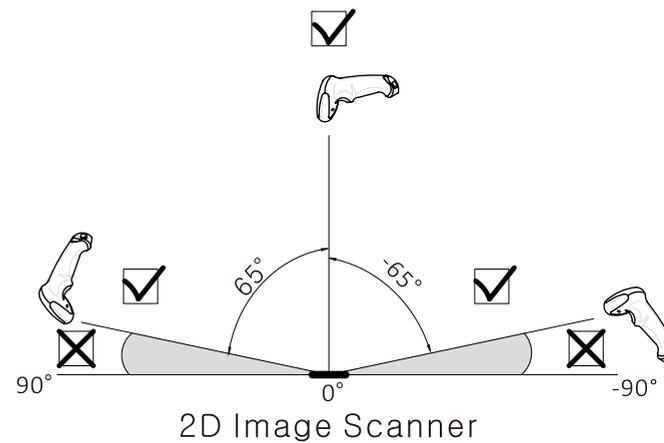

## Correct Scan Method

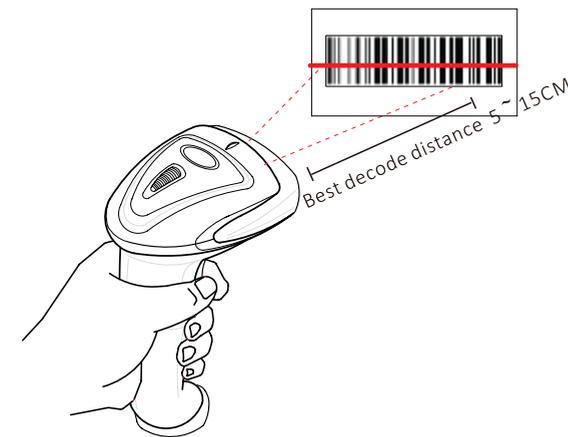

NOTE: Laser beam or Red LED light should fully cover the bar code

## Troubleshooting Q & A

Q1: USB bar code scanner gives a continous beeping sound after scanner with no data uploaded.

A1: Unplug the plug to the scanner from USB port and plug it into a different USB port or reset the interface mode to "USB HUD Keyboard."

Q2: USB bar code scanner makes alarm buzzer sound and no data is uploaded.

A2: Restore factory default

Q3: No laser beam or LED light after connection via RS232

A3: Refer to Data Cable Connection guide in this manual and check power supply.

Q4: No data uploaded and alarm buzzer after scanning via RS232.

A4: Terminal should have software to transfer data when using RS232.

## Decode Settings

Scan the function bar code

### Default Parameter

1) Restoring default mode will not change the Interface Mode. Refer to Interface Mode section for setting the interface.

2) The symbol "\*" indicates default parameter



0D0100.

Restore Defaults

### Firmware Version

Scan the following bar code to display the firmware version number.



091600.

Version

## Keyboard Language



060E000.

\*US

Choose a keyboard layout according to your system language settings.



060E004.

German



060E003.

French



060E001.

French Belgian



060E0027.

Turkish



060E0015.

Czech



060E0016.

Brazil



060E005.

Italian



060E0010.

Spanish

## Interface Mode

Select the required Interface Mode shown below



091803.

USB HID Keyboard



091804.

Serial Output

## Auto Trigger

When the scanner detects an object in its field of view, it will be triggered and attempt to decode without pressing the button.



090901.

Enable auto trigger



091A00.

\*Disable auto trigger

## Suffix Values

Suffix can be appended to scan data for use in data editing.



080404;080507.

None



090200.

\*0x0D ( CR )



090202.

0x0A ( LF )



090300.

0x0D 0x0A ( CR LF )



090201.

TAB

## Code39 Setting



0203051.

Transmit ST/SP



0203050.

\*Not Transmit ST/SP



0203020.

\*Disable Full ASCII Code39



0203021.

Enable Full ASCII Code39

## Illumination



0401020.

High level Illumination



0401022.

Mid level Illumination



0401023.

Low level Illumination

## Symbologies

Read this function bar code to enable decode all bar code type.



0201001.

Enable all symbologies