

SC402

2D BARCODE SCANNER USER MANUAL



SC402

Introduction

This user's manual is designed to be use with your 2D barcode scanner. For more detailed information, please download the complete manual from our website www.3nstar.com or obtain it from your dealer.

Programming the Scanner

☒ Restore Factory Setting

Scanning the following barcode can restore the scanner to the factory defaults.

“*”denotes default setting



Restore Factory Settings

☒ Selection interface



*USB-KBW



RS232



USB Virtual Com

☒ Illumination



OFF



Flashing Mode

☒ Beep Tones



*ON



OFF



High



Middle



Low

☒ Scan Mode



*Manual Mode



Automatic Mode



*Normal sensitivity



Low sensitivity



High sensitivity



Higher sensitivity

☒ Caps Lock



*Original Data



Lower case compulsive



Upper case compulsive

☒ Suffix



Disable



*Enable



*Enter(0x0D)



TAB



0x0D+0x0A



F1



F10



F12

RS-232 Interface

Data Bits



7Bits



*8Bits

Parity Check



*None



Even parity



Odd parity

Stop Bits



*1Bits



2Bits

Baud Rate



*9600



1200



4800



19200



38400



57600



115200

Language



*USA



French



Italy



Germany



Japan



Spain

Check digit



Not transmit EAN13



*Transmit EAN13



Not transmit UPC A



*Transmit UPC A



Full ASCII 39



*Standard 39

Global Settings



Enable all codes



Disable all codes



Enable 1D codes



Disable 1D codes



Enable 2D codes



Disable 2D codes



*Enable
code 39



Disable
code 39



*Enable
code 128



Disable
code 128