

SC506 BARCODE SCANNER

USER'S MANUAL



V4.0.4



INTRODUCTION

In order to facilitate users to use the product quickly, the functions set in this manual are simple version, and the setting codes of all functions are not listed. For more setting functions, please ask the supplier for the electronic version of the complete manual, and the setting code marked with * is the default setting.

SYSTEM SETTINGS

▶ Restore factory settings



Restore factory settings

The scanner cannot be used normally due to error in setting or forgetting the previous setting. The factory setting can be restored and the normal use function can be restored.

▶ Interface settings



USB*

Input barcode information by USB-HID keyboard. No driver software is required. (Default with driver).



USB virtual serial port

The virtual serial port mode can be used only after the driver is installed, otherwise the host will not recognize the scanner.



RS232

Serial cable is required, otherwise the data can't be transmitted.

► Terminator setting



NONE



CR*



LF



CR/LF*



TAB

▶ **QR Code URL Link**



Disable



Enable*

▶ **Inverse barcode settings**



Normal barcode*



Both Normal and Inverse barcode

Normal barcode is black barcode with a white background.
Inverse barcode is white barcode with a black background.

► **Successful decoding beeper settings (tone)**



Low volume



High volume*



Successful decoding beeper 1*



Successful decoding beeper 2



Successful decoding beeper 3

► Language settings



English



French



Italian



German



Spanish



Finnish



Japanese

► Language settings



Russian



Arabic



Irish



Polish



Dutch



Czech

► Language settings



Portuguese



Swedish



Turkish Q



Greek



Hungarian



Universal

► Other settings



Enable all codes

Only the common codes are enabled with default, after scan "Enable all codes" support all codes decoding.



Version information