

# SCK405

## 2D BARCODE SCANNER

### QUICK START GUIDE

Essential configuration barcodes for installation and field setup.

Scan a barcode to apply the corresponding setting.

- 1 Connect
- 2 Scan setting
- 3 Test

### Introduction

This user's manual is designed for 2D barcode scanner. For detailed usage manual information, please download the complete user manual from our website or obtain from our distributor.

### System Settings

#### Factory Default Settings



Factory Default Settings

Scanning the above barcode can restore the scanner to the factory defaults.

“\*”denotes default setting

#### Data Interface



\*USB-KBW



RS 232



USB Virtual Com

#### QR Url Barcode Output



\*OFF



ON

#### Read All Barcode Types



ON



OFF

#### Read All 1D Barcodes



ON



OFF

#### Read All 2D Barcodes



ON



OFF

#### Terminal Character



None



\*CR



LF



CR/LF



TAB

#### Caps Lock



\*Original Data



Case Inversion



Alphabet Always Upper Case



Alphabet Always Lower Case

#### Baud Rate



4800



\*9600



38400



19200



57600



115200

### **Data bit, Stop bit, Parity bit**



7 bit, 1 stop bit, no parity



7 bit, 1 stop bit, even parity



7 bit, 1 stop bit, add parity



7 bit, 2 stop bit, no parity



7 bit, 2 stop bit, even parity



7 bit, 2 stop bit, add parity



\*8 bit, 1 stop bit, no parity



8 bit, 1 stop bit, even parity



8 bit, 1 stop bit, add parity



8 bit, 2 stop bit, no parity



8 bit, 2 stop bit, even parity



8 bit, 2 stop bit, add parity

### **Beeper Volume**



Low



\*High

### **Successful Decoding Beeper**



OFF



\*ON

### **Successful Decoding Beeper Frequency**



Low



\*Medium



High

### **USB Keyboard Sending Speed Sets**



\*Low



Medium



High

### **Language**



\*USA



French



Italy



Germany



Spain



Russia



Portugal



Turkey Q



Belgium



Japan



Arabic



Sweden



Finland



Universal